






VOLA 1600

Fitting instruction
Montageanleitung
Monteringsvejledning
Monteringsvægledning
Montage hanleiding
Manuel de montage

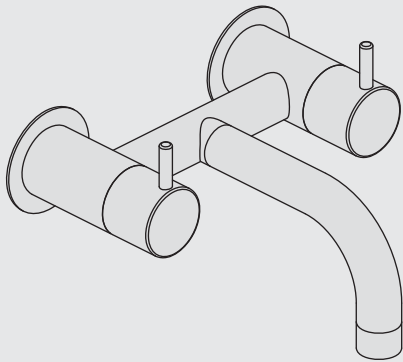

Data	Bar:	1	2	3	4	5
1611/1621	(l/min) (Gal/min)	13.4 3.5	18.9 5.0	23.2 6.1	26.8 7.1	30.0 7.9
1641	(l/min) (Gal/min)	11.4 3.0	16.2 4.3	19.8 5.3	22.9 6.1	25.6 6.8
1641 - T2	(l/min) (Gal/min)	6.6 1.74	9.4 2.5	11.5 3.0	13.3 3.5	14.8 3.9
1671 - T2	(l/min)	9.9	14.0	17.2	19.9	22.2
1671-HT2	(Gal/min)	2.6	3.7	4.5	5.3	5.9
	Max. 65°C. 150°F					


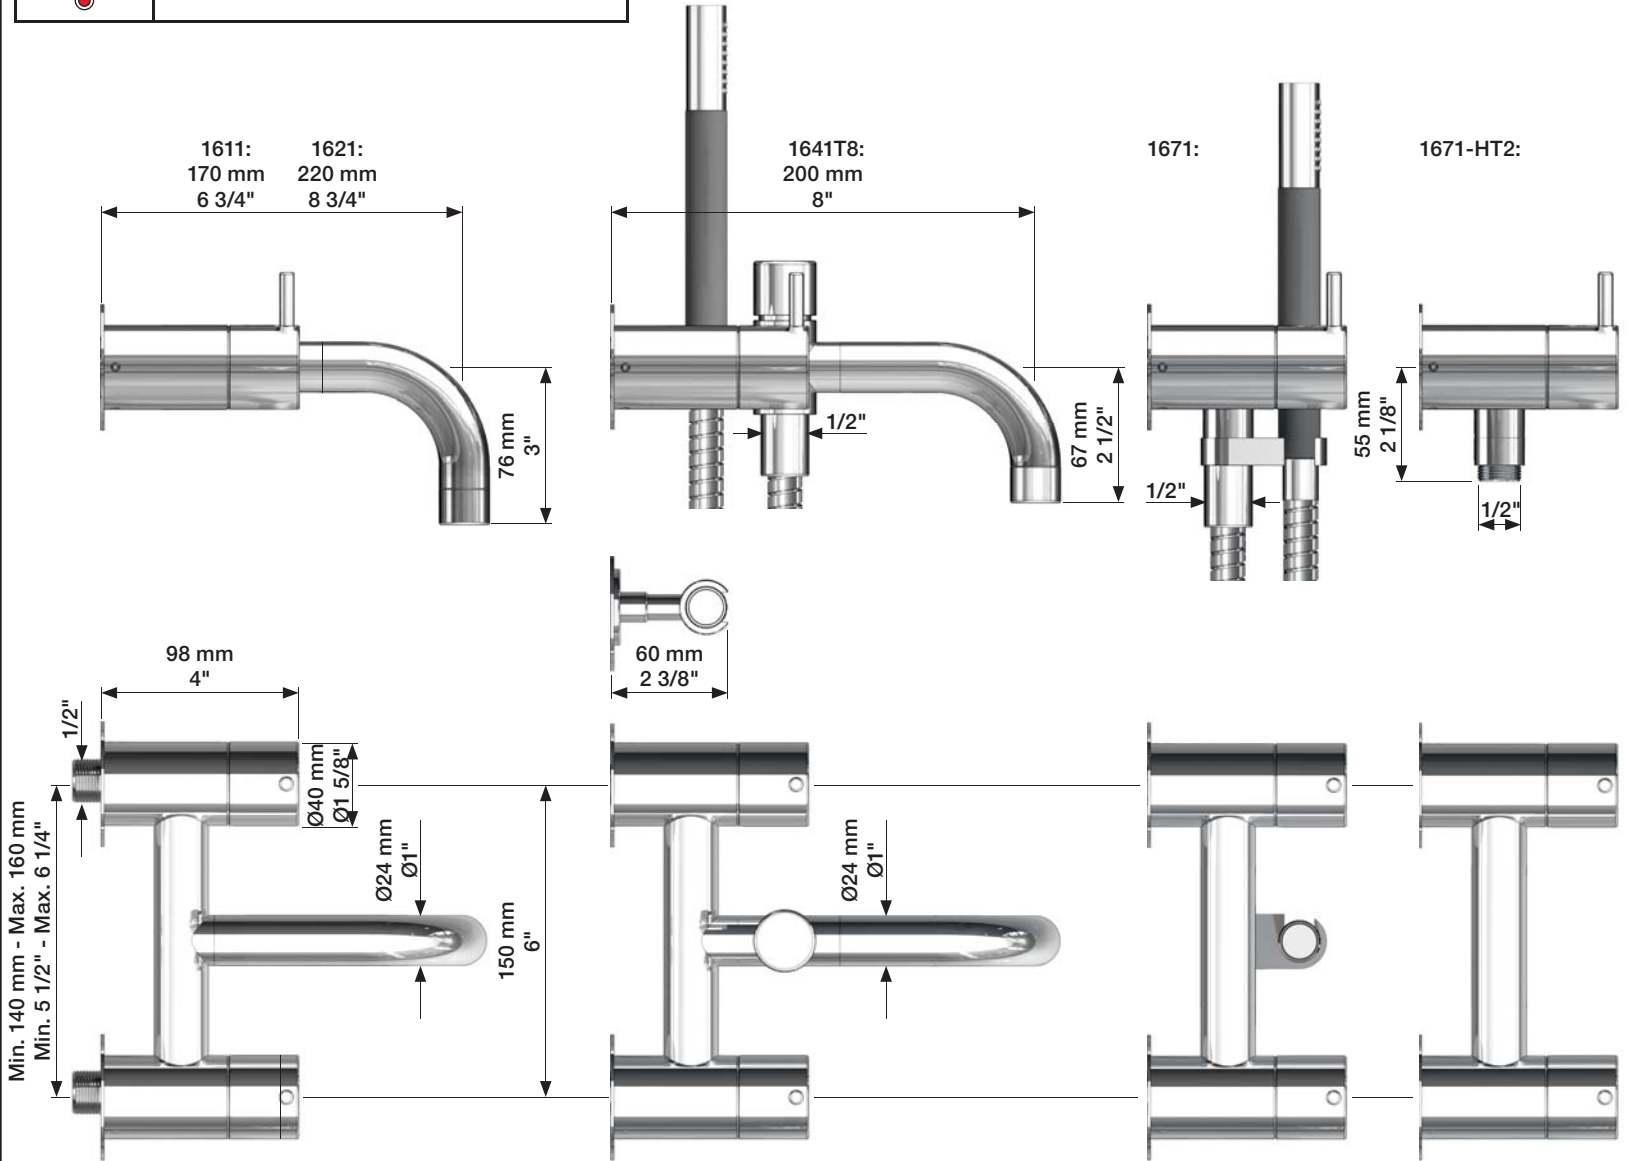


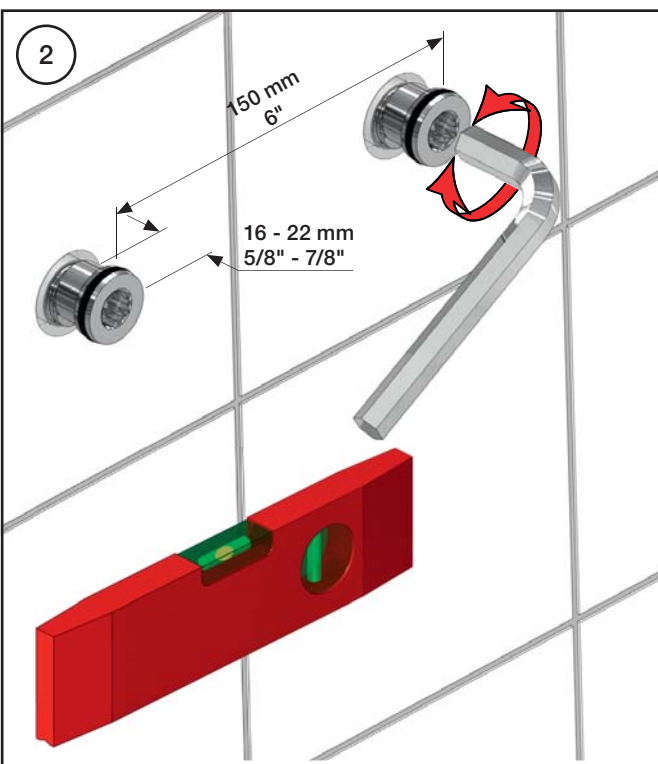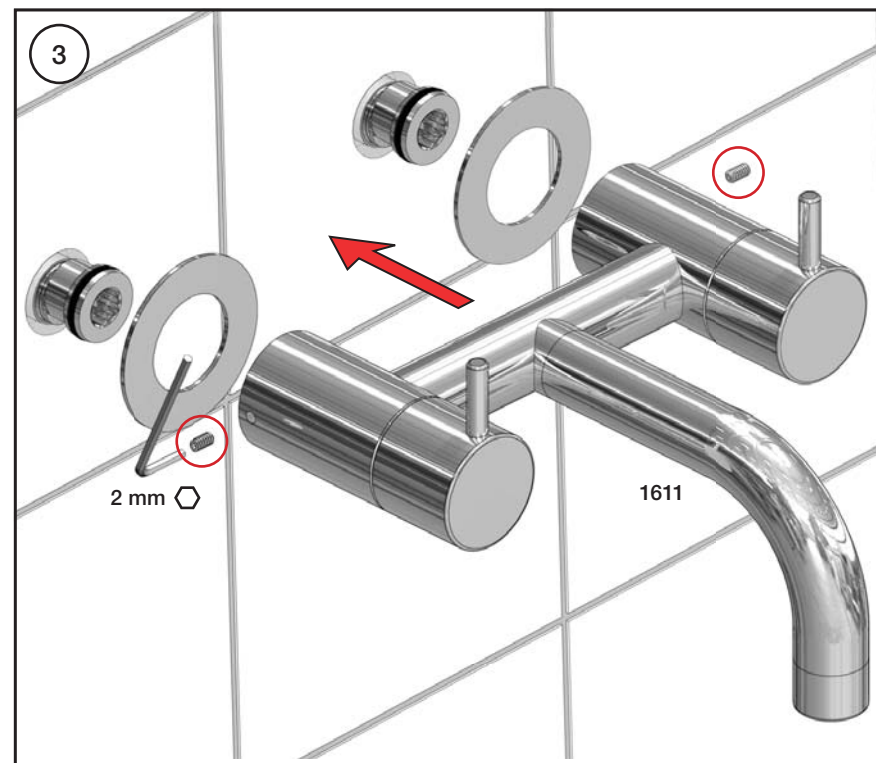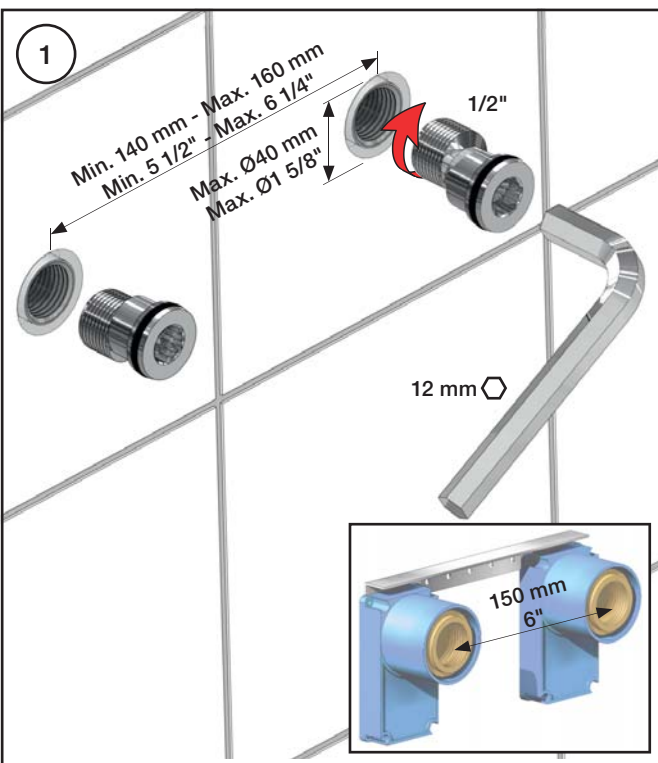



VOLA T2+T2M




VOLA T2

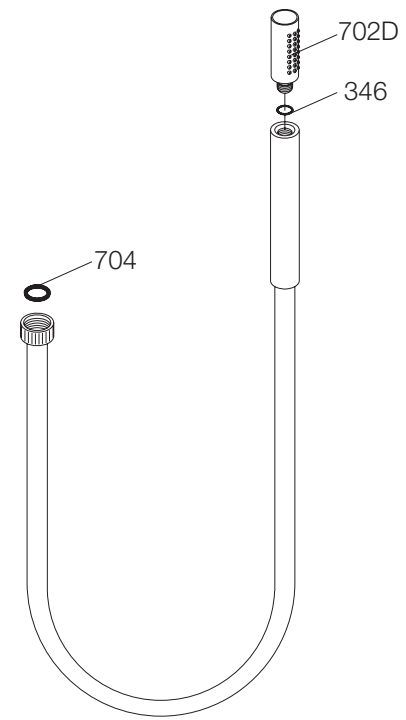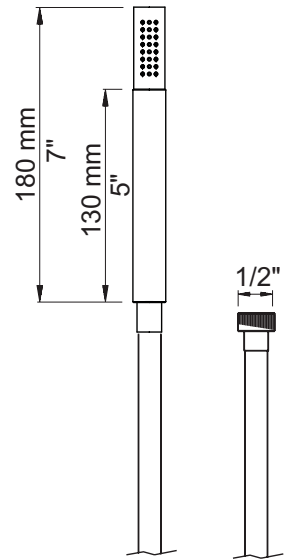

VOLA T2M

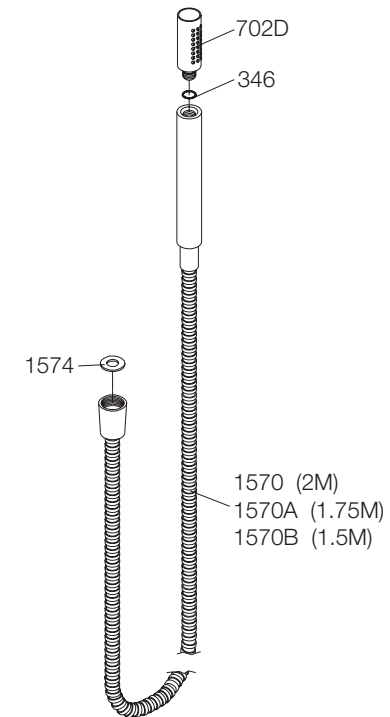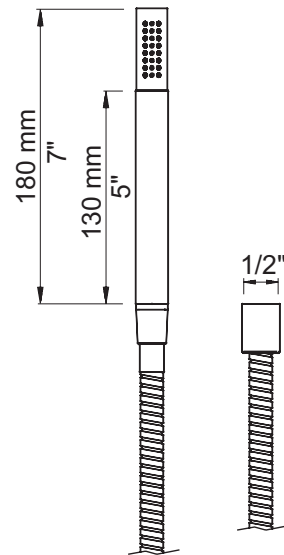

Fitting instruction
Montageanleitung
Monteringsvejledning
Monteringsvågledning
Montage hanleiding
Manuel de montage

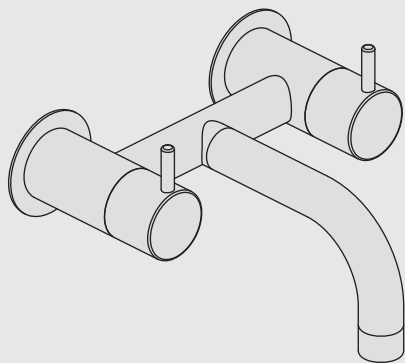

Data	Bar:	1	2	3	4	5
1611/1621	(l/min) (Gal/min)	13.4 3.5	18.9 5.0	23.2 6.1	26.8 7.1	30.0 7.9
1641	(l/min) (Gal/min)	11.4 3.0	16.2 4.3	19.8 5.3	22.9 6.1	25.6 6.8
1641 - T2	(l/min) (Gal/min)	6.6 1.74	9.4 2.5	11.5 3.0	13.3 3.5	14.8 3.9
1671 - T2	(l/min)	9.9	14.0	17.2	19.9	22.2
1671-HT2	(Gal/min)	2.6	3.7	4.5	5.3	5.9
	Max. 65°C. 150°F					

